



Haze Battery Company Ltd



**Sealed Lead Acid 12 Volt
Monobloc
Front Access Range - Gel & AGM**

AGM Front Access



AGM Technology - AGM technology has a number of advantages over the equivalent Gel battery range, the main advantages for the Telecommunication applications are as follows:

- Increased capacity over shorter discharge times.
- Lower initial cost.
- Ideal for starting and stationary applications.
- More suitable for UPS stand-by where power outages are uncommon.
- Smaller size battery can be used for higher rate discharges.

Haze only employ "S wrapping" in our AGM construction to further reduce the possibility of short circuits due to mossing. Closely controlled plate density and thickness results in excellent consistent performance when placed in a string (series connection)
Batteries are manufactured under a quality system designed to meet and exceed ISO 9002.



Front Access AGM Construction - AGM battery construction is as shown in the above diagram. The positive and negative grids are cast from a calcium/tin lead alloy to reduce grid growth and corrosion.

The active material is manufactured from a high purity lead (99.9999%) to minimize the impurities, which would cause corrosion and self-discharge.

AGM battery construction is as shown in the above diagram. The positive and negative grids are cast from a calcium/tin lead alloy to reduce grid growth and corrosion. The active material is manufactured from a high purity lead (99.9999%) to minimize the impurities, which would cause corrosion and self-discharge.

The separator is mat of random woven glass fibres, they are completely acid resistant and act as a sponge soaking up and immobilizing the acid whilst keeping the acid available when it is needed during periods of battery discharge. "S Wrapping" is employed to reduce the risk of short circuit due to mossing or debris at the bottom of the cell.

The purpose of the separator is to maintain a constant distance between the positive and negative plates, totally eliminating the possibility of short circuits whilst allowing the active materials to fully react with the electrolyte. The separator also has an open construction, which offers little resistance to the flow of the electrolyte during filling.

Applications

- Float service
- Uninterruptible Power Supplies
- Medical
- Telecommunications
- Switch Gear
- Photovoltaic
- Solar
- Wind
- Control Systems
- Cellular Radio Stations
- Cathodic Protection
- Navigation Aids
- Marine equipment
- Electric Power Systems

Front Access Gel Construction - is as shown in the diagram. The positive and negative grids are cast from a calcium/tin lead alloy to reduce grid growth and corrosion. The active material is manufactured from a high purity lead (99.9999%) to minimize the detrimental effects of impurities, e.g. corrosion and self-discharge.

Separator is manufactured by a world leader in the field, utilizing the latest German technology. The base material is a microporous duroplastic exhibiting excellent high temperature stability and mechanical strength, resulting in very good resistance to vibration and mechanical shock. The integrity of the battery will be maintained under extreme conditions.

Typical properties are:

Acid displacement - 150ml/sqm

Pore volume - 70%

Average pore size - 0.5 m

Maximum pore Diameter - 1 m

The purpose of the separator is to maintain a constant distance between the positive and negative plates, totally eliminating the possibility of short circuits whilst allowing the active materials to fully react with the gelled electrolyte.


The separator also has an open construction, which allows little resistance to the flow of the electrolyte during filling. A thin layer (typically 0.4mm) of non-woven glass mat is an integral part of the separator and is placed against the positive plate for improved surface contact.

The purpose of the separator is to maintain a constant distance between the positive and negative plates, totally eliminating the possibility of short circuits whilst allowing the active materials to fully react with the electrolyte. The separator also has an open construction, which offers little resistance to the flow of the electrolyte during filling.

Applications

- Float service
- Residential
- Telecommunications
- Refrigeration
- Poor charging applications
- Frequent use applications
- Wind
- Engine Starting
- Higher ambient temperature applications
- Water Pumping
- Road side cabinets
- Cathodic Protection
- Boats
- General Marine
- Many other extreme applications

Gel Front Access

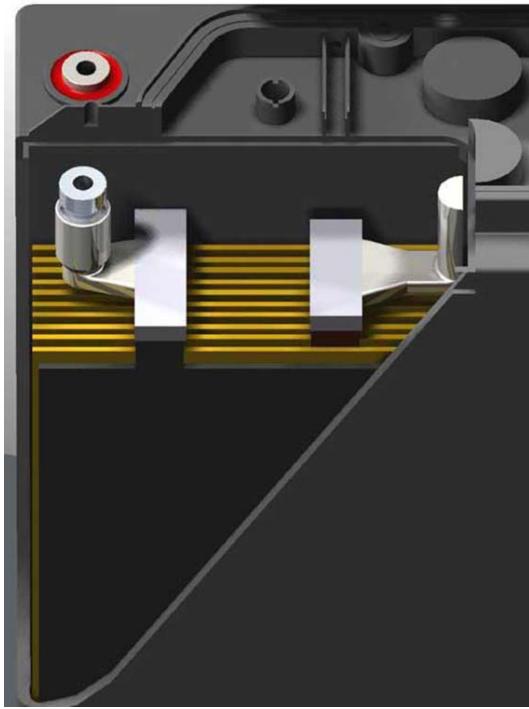

Gel Technology has a number of advantages over the equivalent AGM battery range, the main advantages for the Telecommunication applications are as follows:

- Increased durability and deep cycle ability for heavy demand applications.
- Full recovery from deep discharge, even when not charged immediately
- Suitable where mains power is unstable
- High tolerance to discharge when full charge has not been achieved
- Limiting design protects the positive plates to greatly improve cycle life
- Excellent performance over longer discharges
- Reduced self-discharge

Batteries are manufactured under a quality system designed to meet and exceed ISO 9002.

Disadvantages

- Reduced High rate performance
- Requires cycling to reach full capacity



ELECTROLYTE FILLING - Special production and QC systems are utilised to ensure the electrolyte saturation is optimised for each battery. The battery design and construction negates the need for electrolyte addition and the battery remains maintenance free throughout its design life.



GAS RECOMBINATION - The gasses generated during normal operation of the battery are internally recombined. In fact more than 99% of the gas achieves recombination.

SAFETY RELEASE VALVE - The battery will operate above atmospheric pressure under normal operating conditions, however the maximum pressure is governed by the safety release valve. Open is activated by pressures in excess of approx. 2 psi (14 Kpa), resealing at approx 1.2 psi (8.4 Kpa).



TERMINAL CONSTRUCTION - The contact quality between the insert terminal and the lead post is of vital importance during short duration / high Amp discharges. Elevated terminal temperatures are the result of poor contact, eventually causing seal degradation and electrolyte leaks. Haze design and assembly technique for terminal casting ensures trouble free operation for the design life of the battery.



Haze Battery Company keenly encourages environmental awareness; PLEASE follow guidelines for the recycling /disposal of lead.




Capacity temperature correction Factor to be applied to Data at 20 Degrees C									
Discharge Time	0 °C	5 °C	10 °C	15 °C	20 °C	25 °C	30 °C	35 °C	40 °C
5 minutes to 59 minutes	0.8	0.86	0.91	0.96	1	1.037	1.063	1.085	1.1
1 Hour to 100 Hours	0.86	0.9	0.93	0.97	1	1.028	1.05	1.063	1.07


CHEMICAL REACTION- The chemical reaction for the Discharge / Recharge process is represented by the following formula:




Under normal float charge conditions the oxygen passes through the separator from the positive to the negative plate where it reacts with the negative active material to form lead oxide.

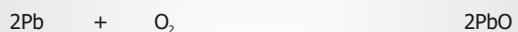


In the acid conditions the lead oxide reacts with the sulfuric acid to form lead sulphate.

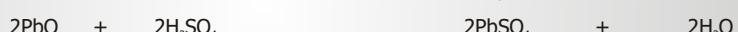

The lead sulphate formed on the negative is then reduced to lead and sulfuric acid by the evolving hydrogen.

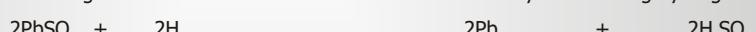


If the equations are resolved and like terms cancelled out on both sides of the equation the result is:

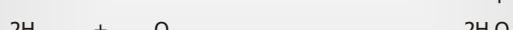

This reaction summarises what is meant by GAS RECOMBINATION. The process can never be 100% efficient, normal recombination efficiency is 95 - 99%.



Features - Designed to meet the future needs of the Tele-communications industry for - mobile, wired, access, transmission, switching, integrated power applications etc.
 Resulting in the following benefits to the customer:

- Compactness
- ETSI / 19" / 23" Integration
- Modularity
- Rackable Standard component
- Long life
- Use under extreme conditions
- High power volume ratio
- Maintenance free utilising VRLA technology
- Low Installation costs
- Front Connections and terminal access
- Long Design Life - 12 years
- Rope handles on 100Ah upwards
- Central gassing system and hinged front covers on all models
- Integral flame arrestor
- Low Internal resistance
- Recyclable lead and plastics
- Designed to meet BELLCORE recommendations
- Utilising Gel technology
- Excellent Cycling ability
- Low self discharge rates

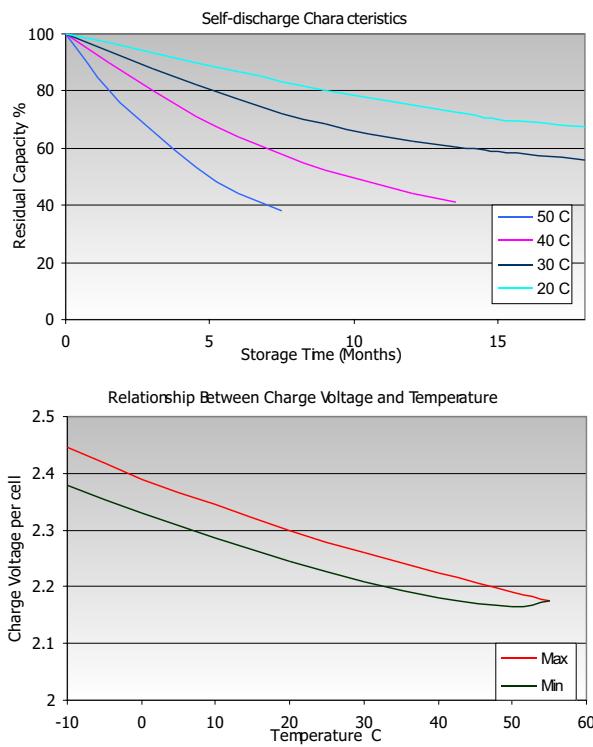

Specifications

Nominal Voltage	12 Volts
Design Life	12 Years
Operating Temperature	-20 °C to 50 °C
Grid alloy	Calcium / Tin lead alloy
Plates	Flat Pasted
Separator	Gel - Microporous Duroplastic AGM - Absorbant Glass Mat
Active material	Very high purity lead
Case and cover	ABS (VO on request)
Charge Voltage	Float 2.27 - 2.30 VPC @20 °C Cycling 2.4 @20 °C
Electrolyte	Max. 2.4 VPC Max ripple 0.05C (A) Sulphuric acid Analytical grade purity
Venting Valve	EPDM Rubber 1.5 to 2 psi (10.5 - 14 KPa) release pressure. Resealing at 1 psi (7 KPa)
Terminal	Epoxy sealed by extended mechanical paths
Torque setting	The recommended torque value is 5-7 Nm
Connectors	Supplied as standard

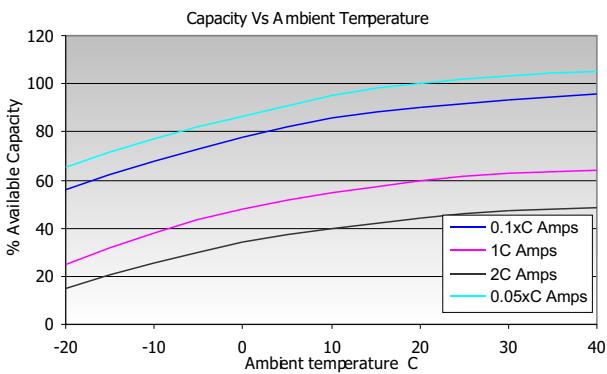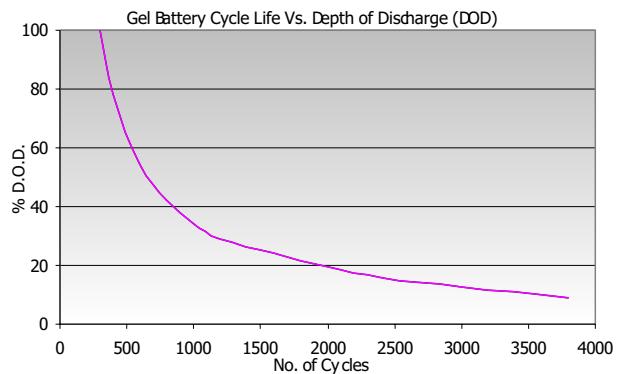



Amps & Ampere Hour Data

Battery Model	Time in Minutes - Amps to 1.85 VPC 20-25 °C									
	10	15	20	25	30	35	40	45	60	90
HZB12-55FA	111	96.0	83.4	72.7	64.4	57.5	51.8	47.1	37.4	27.2
HZB12-80FA	157	140	120	105	93.6	84.2	76.5	70.0	56.0	40.3
HZB12-95FA	193	167	143	123	108	96.0	86.6	79.1	62.9	45.4
HZB12-95FA-2	184	159	136	117	103	91.3	82.3	75.2	59.8	43.0
HZB12-100FA	198	171	146	126	110	97.9	87.9	80.1	63.7	46.5
HZB12-125FA	230	191	164	144	129	115	105	96.3	78.3	58.6
HZB12-150FA	256	229	200	177	159	145	132	122	99.0	71.3
HZB12-180FA	288	241	210	187	168	152	140	130	112	82.7

Battery Model	Time in Hours - Amps to 1.85 VPC											
	2	3	4	5	6	7	8	10	12	20	24	
HZB12-55FA	21.7	15.6	12.2	10.0	8.5	7.4	6.56	5.39	4.58	2.90	2.45	
HZB12-80FA	31.8	22.6	17.7	14.6	12.5	11.0	9.78	8.01	6.82	4.34	3.68	
HZB12-95FA	36.4	26.7	21.5	18.2	15.7	13.8	12.3	10.1	8.63	5.52	4.67	
HZB12-95FA-2	34.2	25.0	20.0	16.7	14.5	12.7	11.3	9.2	7.78	4.95	4.21	
HZB12-100FA	37.7	27.9	22.3	18.6	15.8	13.9	12.3	10.1	8.59	5.54	4.70	
HZB12-125FA	47.7	35.7	29.0	24.8	21.7	19.3	17.4	14.5	12.5	7.99	6.76	
HZB12-150FA	56.2	39.7	31.3	26.0	22.4	19.8	17.7	14.6	12.3	7.60	6.36	
HZB12-180FA	65.8	47.1	37.3	31.1	26.8	23.7	21.2	17.6	15.0	9.44	7.93	

Battery Model	Time in Hours Ah to 1.85 VPC 20-25 °C											
	1.5	2	3	4	5	6	7	8	10	12	20	24
HZB12-55FA	40.8	43.3	46.7	48.6	49.9	50.8	51.7	52.5	53.9	55.0	58.0	58.9
HZB12-80FA	60.5	63.6	67.8	70.6	73.1	75.0	76.8	78.2	80.1	81.8	86.9	88.2
HZB12-95FA	68.2	72.8	80.2	86.0	90.8	94.4	96.9	98.7	101	104	110	112
HZB12-95FA-2	64.5	68.5	74.9	79.9	83.7	86.7	88.7	90.2	92.0	93.4	98.9	101
HZB12-100FA	69.7	75.3	83.8	89.0	92.8	95.0	97.0	98.5	101	103	111	113
HZB12-125FA	87.9	95.4	107	116	124	130	135	139	145	150	160	162
HZB12-150FA	107	112	119	125	130	135	138	142	146	148	152	153
HZB12-180FA	124	132	141	149	155	161	166	170	176	180	189	190

Battery Model	Time in Minutes - Amps to 1.80 VPC 20-25 °C									
	10	15	20	25	30	35	40	45	60	90
HZB12-55FA	118	100	86.7	75.1	66.1	59.1	53.2	48.4	38.3	27.7
HZB12-80FA	182	152	129	111	98.2	87.5	79.1	72.1	57.6	41.3
HZB12-95FA	218	179	151	128	112	99.1	89.4	81.5	64.7	46.7
HZB12-95FA-2	197	166	141	121	106	94.2	85.0	77.5	61.5	43.9
HZB12-100FA	225	185	154	132	115	102	91.5	83.3	66.1	47.9
HZB12-125FA	265	220	186	162	144	130	118	108	86.6	63.8
HZB12-150FA	309	264	226	195	174	157	142	130	104	74.0
HZB12-180FA	337	281	242	215	195	176	161	150	122	87.6

Battery Model	Time in Hours - Amps to 1.80 VPC											
	2	3	4	5	6	7	8	10	12	20	24	
HZB12-55FA	22.1	15.9	12.4	10.1	8.6	7.5	6.67	5.48	4.66	2.95	2.49	
HZB12-80FA	32.5	23.0	18.0	14.9	12.7	11.1	9.9	8.09	6.89	4.39	3.71	
HZB12-95FA	37.3	27.2	21.9	18.5	16.0	14.1	12.6	10.3	8.78	5.61	4.75	
HZB12-95FA-2	35.0	25.5	20.3	17.1	14.7	12.9	11.5	9.4	7.97	5.07	4.32	
HZB12-100FA	38.8	28.6	22.9	19.0	16.2	14.2	12.6	10.3	8.79	5.65	4.80	
HZB12-125FA	51.3	37.8	30.4	25.7	22.4	19.8	17.9	15.0	12.8	8.16	6.92	
HZB12-150FA	57.9	41.1	32.4	26.9	23.1	20.4	18.2	15.0	12.7	7.87	6.62	
HZB12-180FA	68.6	49.0	38.7	32.2	27.7	24.4	21.9	18.2	15.4	9.68	8.14	

Battery Model	Time in Hours Ah to 1.80 VPC 20-25 °C											
	1.5	2	3	4	5	6	7	8	10	12	20	24
HZB12-55FA	41.6	44.1	47.6	49.4	50.7	51.8	52.6	53.4	54.8	55.9	58.9	59.8
HZB12-80FA	61.9	64.9	69.0	71.8	74.3	76.3	77.9	79.1	80.9	82.7	87.8	89.0
HZB12-95FA	70.0	74.5	81.6	87.4	92.3	96.0	98.6	101	103	105	112	114
HZB12-95FA-2	65.9	70.0	76.6	81.1	85.3	88.3	90.6	92.2	94.0	95.6	101	104
HZB12-100FA	71.9	77.5	85.8	91.5	95.2	97.4	99.1	101	103	105	113	115
HZB12-125FA	95.6	103	113	122	129	135	139	143	150	154	163	166
HZB12-150FA	111	116	123	130	135	139	143	146	150	152	157	159
HZB12-180FA	131	137	147	155	161	166	171	176	182	185	194	195

Battery Model	Time in Minutes - Amps to 1.70 VPC 20-25 °C									
	10	15	20	25	30	35	40	45	60	90
HZB12-55FA	128	106	89.7	77.5	67.9	60.8	54.6	49.6	39.1	28.4
HZB12-80FA	203	164	137	116	102	90.2	81.6	74.4	58.9	41.9
HZB12-95FA	242	191	157	133	116	102	92.0	83.6	66.2	47.6
HZB12-95FA-2	217	178	148	126	110	97	87.1	79.3	62.8	45.0
HZB12-100FA	246	196	161	137	119	106	94.8	86.0	68.0	49.3
HZB12-125FA	308	249	208	179	157	141	128	118	93.3	67.5
HZB12-150FA	338	282	240	205	182	163	148	135	107	75.7
HZB12-180FA	378	311	266	234	208	189	173	159	128	91.3

Battery Model	Time in Hours - Amps to 1.70 VPC											
	2	3	4	5	6	7	8	10	12	20	24	
HZB12-55FA	22.7	16.2	12.6	10.3	8.8	7.6	6.80	5.57	4.74	3.01	2.55	
HZB12-80FA	32.8	23.2	18.2	15.0	12.8	11.2	10.0	8.22	6.99	4.46	3.76	
HZB12-95FA	38.0	27.7	22.2	18.6	16.3	14.3	12.8	10.5	8.94	5.71	4.83	
HZB12-95FA-2	35.4	25.9	20.5	17.2								

Battery Model	Time in Minutes - Amps to 1.85 VPC 20-25 °C									
	10	15	20	25	30	35	40	45	60	90
HZY12-50FA	91.8	81.3	71.1	63.8	57.9	52.8	48.0	44.0	34.8	24.5
HZY12-70FA	138	122	107	96.0	86.2	77.5	70.0	63.5	50.3	36.2
HZY12-90FA	167	149	132	119	107	98.2	90.2	82.7	65.3	45.7
HZY12-100FA	169	141	127	113	105	97.0	89.6	82.4	65.5	46.4
HZY12-125FA	188	156	136	121	109	99.1	91.1	84.7	69.7	52.7
HZY12-150FA	229	205	178	156	141	129	118	110	89.3	64.1
HZY12-170FA	259	217	189	168	151	139	129	121	101	74.9

Battery Model	Time in Hours - Amps to 1.85 VPC										
	2	3	4	5	6	7	8	10	12	20	24
HZY12-50FA	19.0	13.4	10.5	8.73	7.55	6.67	5.95	4.94	4.21	2.67	2.25
HZY12-70FA	28.5	20.2	16.0	13.3	11.5	10.1	9.11	7.53	6.44	4.11	3.47
HZY12-90FA	35.6	25.2	19.9	16.6	14.4	12.7	11.4	9.49	8.11	5.19	4.38
HZY12-100FA	36.0	25.4	20.1	16.8	14.6	12.9	11.6	9.60	8.22	5.27	4.43
HZY12-125FA	43.4	32.8	27.0	23.3	20.4	18.3	16.5	14.0	12.1	7.83	6.66
HZY12-150FA	50.1	35.6	28.3	23.9	20.8	18.5	16.7	14.0	11.9	7.55	6.36
HZY12-170FA	59.5	42.6	33.6	28.2	24.4	21.5	19.3	16.0	13.7	8.50	7.15

Battery Model	Time in Hours Ah to 1.85 VPC 20-25 °C										
	2	3	4	5	6	7	8	10	12	20	24
HZY12-50FA	37.9	40.2	42.1	43.7	45.3	46.7	47.6	49.4	50.5	53.4	54.1
HZY12-70FA	57.0	60.6	63.8	66.5	68.9	70.9	72.9	75.3	77.3	82.2	83.3
HZY12-90FA	71.1	75.5	79.5	82.9	86.3	88.9	91.3	94.9	97.4	104	105
HZY12-100FA	72.0	76.3	80.2	83.9	87.4	90.2	92.4	96.0	98.7	105	106
HZY12-125FA	86.8	98.5	108	116	123	128	132	140	145	157	160
HZY12-150FA	100	107	113	120	125	130	134	140	143	151	153
HZY12-170FA	119	128	135	141	146	151	155	160	164	170	172

Battery Model	Time in Minutes - Amps to 1.80 VPC 20-25 °C									
	10	15	20	25	30	35	40	45	60	90
HZY12-50FA	104	88.1	75.4	67.3	60.5	55.0	49.8	45.4	35.8	25.0
HZY12-70FA	148	129	113	100	88.7	79.3	71.5	65.0	51.5	37.0
HZY12-90FA	185	161	140	124	112	102	93.2	85.3	67.0	47.0
HZY12-100FA	203	170	145	127	114	105	95.3	87.1	68.4	48.0
HZY12-125FA	217	181	155	136	122	112	102	94.7	77.1	57.4
HZY12-150FA	276	231	194	169	151	136	125	115	92.9	66.5
HZY12-170FA	303	253	218	193	175	159	145	135	108	78.8

Battery Model	Time in Hours - Amps to 1.80 VPC										
	2	3	4	5	6	7	8	10	12	20	24
HZY12-50FA	19.4	13.6	10.8	8.98	7.75	6.83	6.12	5.04	4.30	2.73	2.31
HZY12-70FA	29.2	20.7	16.4	13.7	11.8	10.4	9.34	7.72	6.58	4.20	3.55
HZY12-90FA	36.6	26.0	20.5	17.1	14.8	13.1	11.8	9.77	8.35	5.31	4.48
HZY12-100FA	37.3	26.3	20.7	17.3	15.0	13.2	11.8	9.81	8.38	5.38	4.54
HZY12-125FA	46.7	34.8	28.3	24.2	21.2	18.9	17.0	14.4	12.4	8.00	6.83
HZY12-150FA	52.0	37.0	29.4	24.7	21.5	19.1	17.3	14.4	12.3	7.78	6.55
HZY12-170FA	61.7	44.1	34.8	29.0	25.0	22.1	19.8	16.4	14.0	8.71	7.35

Battery Model	Time in Hours Ah to 1.80 VPC 20-25 °C										
	2	3	4	5	6	7	8	10	12	20	24
HZY12-50FA	38.7	40.9	43.0	44.9	46.5	47.8	48.9	50.4	51.6	54.7	55.3
HZY12-70FA	58.4	62.2	65.5	68.4	70.8	73.0	74.7	77.2	78.9	84.0	85.2
HZY12-90FA	73.1	77.9	82.0	85.6	88.8	91.6	94.2	97.7	100	106	108
HZY12-100FA	74.6	78.8	82.9	86.5	89.7	92.4	94.7	98.1	101	108	109
HZY12-125FA	93.4	104	113	121	127	132	136	144	149	160	164
HZY12-150FA	104	111	118	124	129	134	138	144	148	156	157
HZY12-170FA	123	132	139	145	150	155	158	164	174	178	176

Battery Model	Time in Minutes - Amps to 1.75 VPC 20-25 °C									
	10	15	20	25	30	35	40	45	60	90
HZY12-50FA	109	91.4	77.8	69.1	62.1	56.1	50.7	46.1	36.1	25.2
HZY12-70FA	158	133	116	101	90.0	80.4	72.4	65.8	52.1	37.4
HZY12-90FA	193	166	143	126	113	103	94.2	86.1	67.7	47.4
HZY12-100FA	213	178	151	132	118	107	97.3	88.5	69.2	48.5
HZY12-125FA	243	196	167	146	130	118	109	101	80.5	59.5
HZY12-150FA	289	239	200	173	155	139	128	117	94.3	67.3
HZY12-170FA	328	269	232	205	183	167	152	141	112	81.5


Battery Model	Time in Hours - Amps to 1.75 VPC										
	2	3	4	5	6	7	8	10	12	20	24
HZY12-50FA	19.5	13.8	10.8	9.04	7.80	6.90	6.16	5.10	4.34	2.76	2.33
HZY12-70FA	29.6	21.0	16.5	13.8	11.9	10.5	9.45	7.85	6.70	4.27	3.61
HZY12-90FA	36.8	26.2	20.7	17.3	15.0	13.2	11.9	9.88	8.43	5.37	4.53
HZY12-100FA	37.7	26.5	20.9	17.5	15.1	13.4	12.0	9.95	8.48	5.45	4.59
HZY12-125FA	48.1	35.6	28.9	24.6	21.5	19.1	17.3	14.6	12.5	8.06	6.88
HZY12-150FA	52.6	37.5	29.8	25.0	21.8	19.3	17.4	14.6	12.5	7.85	6.61
HZY12-170FA	63.7	45.2	35.5	29.5	25.4	22.4	20.1	16.7	14.2	8.88	7.48

Battery Model	Time in Hours Ah to 1.75 VPC 20-25 °C										
	2	3	4	5	6	7	8	10	12	20	24
HZY12-50FA	39.0	41.3	43.3	45.2	46.8	48.3	49.3	51.0	52.1	55.2	56.0
HZY12-70FA	59.1	62.									

Battery Model Time in Minutes - Watts per cell to 1.85 VPC 20-25 °C													Battery Model Time in Hours Watts per cel to 1.85 VPC 20-25 °C												
10	15	20	25	30	35	40	45	60	90	2	3	4	5	6	7	8	10	12	20	24					
HZB12-55FA	201	178	156	137	123	109	100	90.9	72.3	52.5	41.8	29.9	23.6	19.5	16.7	14.6	12.9	10.6	9.0	5.7	4.8				
HZB12-80FA	281	242	213	189	170	155	142	131	106	77.0	60.5	43.1	33.9	27.9	23.8	20.7	18.4	15.2	13.0	8.3	7.1				
HZB12-95FA	330	287	252	224	199	177	161	147	119	87.7	71.2	52.4	42.0	35.2	30.3	26.7	23.8	19.9	16.9	10.8	9.2				
HZB12-95FA-2	297	263	233	209	187	170	155	141	114	84.2	68.3	49.8	39.5	32.8	28.3	24.9	22.2	18.5	15.8	10.1	8.5				
HZB12-100FA	349	303	266	237	213	193	177	163	129	92.1	73.6	52.8	41.9	35.1	30.3	26.8	24.0	20.1	17.1	11.0	9.3				
HZB12-125FA	419	365	318	277	247	225	208	194	162	123	100	74.7	59.6	51.8	42.0	38.8	34.4	28.6	24.5	15.9	13.5				
HZB12-150FA	484	417	366	323	290	264	242	222	179	129	102	73.7	58.7	49.4	42.8	37.9	33.8	28.3	24.2	15.2	12.8				
HZB12-180FA	593	491	418	368	331	300	278	258	217	160	128	91.9	73.2	60.9	52.7	46.6	41.7	34.9	29.8	18.7	15.8				
Battery Model Time in Minutes - Watts per cell to 1.80 VPC 20-25 °C													Battery Model Time in Hours Watts per cel to 1.80 VPC 20-25 °C												
10	15	20	25	30	35	40	45	60	90	2	3	4	5	6	7	8	10	12	20	24					
HZB12-55FA	221	188	162	142	126	112	102	93.0	73.8	53.3	42.4	30.4	23.9	19.8	16.9	14.8	13.1	10.8	9.2	5.8	4.9				
HZB12-80FA	311	260	225	198	177	160	147	136	109	79.0	62.0	44.1	34.5	28.4	24.3	21.2	18.7	15.5	13.2	8.4	7.2				
HZB12-95FA	367	310	270	236	207	184	167	152	122	90.7	73.3	53.6	43.0	36.0	31.0	27.4	24.4	20.3	17.3	11.0	9.3				
HZB12-95FA-2	325	280	246	218	193	174	160	146	118	87.1	69.9	50.9	40.5	33.5	28.9	25.5	22.7	18.9	16.1	10.3	8.7				
HZB12-100FA	394	330	286	251	224	203	185	169	134	94.9	76.0	54.4	43.1	36.0	31.2	27.5	24.5	20.6	17.5	11.2	9.5				
HZB12-125FA	455	396	345	298	264	239	221	205	170	128	104	76.8	52.1	44.3	39.1	35.0	29.2	25.0	16.1	13.8					
HZB12-150FA	548	460	393	343	307	277	253	232	185	134	674	558	474	416	375	340	314	290	233	169					
HZB12-180FA	674	558	474	416	375	340	314	290	233	175	134	96.5	75.9	63.1	54.4	48.0	42.9	36.0	30.7	19.3	16.3				
Battery Model Time in Minutes - Watts per cell to 1.75 VPC 20-25 °C													Battery Model Time in Hours Watts per cel to 1.75 VPC 20-25 °C												
10	15	20	25	30	35	40	45	60	90	2	3	4	5	6	7	8	10	12	20	24					
HZB12-55FA	229	194	165	144	128	114	103	93.9	74.6	53.9	42.9	30.6	24.1	19.9	17.0	14.9	13.2	10.9	9.2	5.8	4.9				
HZB12-80FA	323	271	232	203	182	164	150	138	111	80.0	63.4	44.5	34.9	28.7	24.4	21.3	18.9	15.6	13.3	8.5	7.2				
HZB12-95FA	393	325	279	242	213	189	171	156	124	92.1	73.5	54.5	43.5	36.4	31.5	27.8	24.8	20.6	17.6	11.2	9.5				
HZB12-95FA-2	344	293	255	225	200	179	164	150	120	88.4	71.2	52.0	41.0	33.9	29.4	25.8	23.1	19.2	16.4	10.4	8.8				
HZB12-100FA	411	343	295	257	230	207	188	172	136	96.8	77.3	55.2	43.8	36.4	31.5	27.9	24.9	20.7	17.6	11.4	9.6				
HZB12-125FA	503	423	359	309	274	247	227	209	173	130	105	77.8	53.7	43.4	36.1	35.6	29.6	25.3	16.3	13.9					
HZB12-150FA	575	478	404	353	313	283	258	237	189	137	106	73.7	57.8	46.2	41.3	39.6	35.4	29.5	25.2	16.0	13.5				
HZB12-180FA	707	588	499	436	390	352	323	297	239	173	134	96.5	75.9	63.1	54.4	48.0	42.9	36.0	30.7	19.3	16.3				
Battery Model Time in Minutes - Watts per cell to 1.70 VPC 20-25 °C													Battery Model Time in Hours Watts per cel to 1.70 VPC 20-25 °C												
10	15	20	25	30	35	40	45	60	90	2	3	4	5	6	7	8	10	12	20	24					
HZB12-55FA	236	198	167	145	129	115	104	94.7	75.4	54.4	43.2	30.8	24.2	20.1	17.1	15.0	13.2	10.9	9.3	5.9	4.9				
HZB12-80FA	338	278	236	206	184	166	151	139	112	80.7	63.4	44.8	35.1	28.9	24.6	21.5	19.0	15.7	13.4	8.5	7.3				
HZB12-95FA	417	337	288	247	217	192	174	158	132	92.3	75.3	55.1	44.0	36.8	31.8	28.1	25.0	20.7	17.7	11.3	9.6				
HZB12-95FA-2	362	304	263	230	204	184	167	152	121	89.4	76.0	54.4	43.5	36.4	31.5	27.9	24.9	20.7	17.6	11.4	9.6				
HZB12-100FA	424	352	301	262	233	209	190	173	137	97.6	77.9	55.7	43.8	36.9	31.8	28.1	25.1	20.9	17.7	11.4	9.7				
HZB12-125FA	533	435	365	314	277	250	228	211	175	131	106	78.1	52.3	44.1	43.6	35.8	29.8	25.5	16.4	13.9					
HZB12-150FA	596	492	415	360	320	288	262	240	191	138	106	73.8	57.8	46.5	45.5	48.7	43.5	36.5	31.1	19.6	16.5				
HZB12-180FA	738	606	512	445	398	359	329	302	247	175	135	98.8	77.8	64.5	55.7	49.0	43.8	36.7	31.3	19.7	16.7				
Battery Model Time in Minutes - Watts per cell to 1.65 VPC 20-25 °C													Battery Model Time in Hours Watts per cel to 1.65 VPC 20-25 °C												
10	15	20	25	30	35	40	45	60	90	120	180	240	290	330	370	410	450	500	540	580	63.1				
HZB12-55FA	242	202	170	148	130	116	105	95.6	75.9	54.7	43.4	31.0	24.9	20.6	17.2	14.9	11.7	10.6	9.6	8.0	7.0				
HZB12-80FA	346	284	240	209	186	167	153	140	113	84.4	63.8	45.2	35.0	29.9	25.5	21.0	17.7	14.3	12.8	10.7	9.0				
HZB12-95FA	424	345	292	251	219	194	175	159	128	93.8	75.8	55.4	43.2	36.4	31.8	28.1	24.8	21.3	17.7	14.3	12.5				
HZB12-95FA-2	372	313	268	236	206	186	168	153	122	90.0	73.2	52.0	41.4	34.3	30.7	27.3	24.1	20.9	17.7	14.3	12.5				
HZB12-100FA	438	360	305	265	235	210	192	174	138	98.4	78.4	56.0	43.6	36.9	31.8	28.1	25.1	20.9	17.7	14.3	12.5				
HZB12-125FA	555	443	368	316	279	251	230	213	176	131	106	78.1	57.8	46.2	41.3	36.9	33.1	27.8	23.8	15.1	12.7				
HZB12-150FA	613	502	421	365	323	290	265	242	193	139	110	79.0	57.8	46.2	41.3	36.9	33.1	27.8	23.8	15.1	12.7				
HZB12-180FA	754	614	518	449	391	331	298	270	250	232	192	143	99.3	75.9	63.1	54.0	46.7	41.1	36.7	30.6	26.1	16.5			
Battery Model Time in Minutes - Watts per cell to 1.80 VPC 20-25 °C													Battery Model Time in Hours Watts per cel to 1.80 VPC 20-25 °C												
10	15	20	25	30	35	40	45	60	90	120	180	240	290	330	370	410	450	500	540	580	63.1				
HZB12-50FA	192	151	134	121	110	100	91.1	83.1	65.7	46.7	37.5	26.5	21.0	17.6	15.1	13.4	11.9	10.0	8.5	5.4	4.6				
HZB12-70FA	259	235	206	185	167	153	140	136	125	99.7	70.4	55.1	49.2	39.1	32.7	28.3	25.0	22.5	18.8	16.1	10.3	8.7			
HZB12-90FA	307																								

Battery Model	Qty Per Box	Dimensions (mm) & approx weight (kg)				Dimensions (Inches) & approx weight (Lbs)				Terminal Layout	Internal Resistance mOhms	Maximum Charge Current
		Length	Width	Height	Weight	Length	Width	Height	Weight			
HZB12-55FA	1	277	105	223	18.4	10.91	4.13	8.78	40.7	M6	4.5	15
HZB12-80FA	1	563	114	182	26.0	22.17	4.49	7.17	57.5	M6	4.4	20
HZB12-95FA	1	507	109	227	30.0	19.96	4.29	8.94	66.3	M6	4.3	25
HZB12-95FA-2	1	396	105	258	27.4	15.59	4.13	10.16	60.6	M6	3.9	25
HZB12-100FA	1	395	110	285	32.6	15.55	4.33	11.22	72.0	M6	3.5	30
HZB12-125FA	1	417	172	240	45.3	16.42	6.77	9.45	100.1	M6	3.4	35
HZB12-150FA	1	550	109	288	48.3	21.65	4.29	11.34	106.7	M6	3.2	40
HZB12-180FA	1	560	125	320	59.5	22.05	4.92	12.60	131.5	M8	3.1	45
HZY12-50FA	1	277	105	223	18.2	10.91	4.13	8.78	40.2	M6	4.5	15
HZY12-70FA	1	563	114	182	28.9	22.17	4.49	7.17	63.9	M6	4.1	20
HZY12-90FA	1	507	109	227	32.0	19.96	4.29	8.94	70.7	M6	3.7	25
HZY12-100FA	1	395	110	285	33.2	15.55	4.33	11.22	73.4	M6	3.4	30
HZY12-125FA	1	417	172	240	46.0	16.42	6.77	9.45	101.7	M6	3.3	35
HZY12-150FA	1	550	109	288	48.0	21.65	4.29	11.34	106.1	M6	3.1	40
HZY12-170FA	1	560	125	320	59.0	22.05	4.92	12.60	130.4	M8	2.9	45

The graph shows extrapolated Service Life condition for Haze batteries at different ambient temperatures. Clearly higher ambient temperatures will reduce service life.

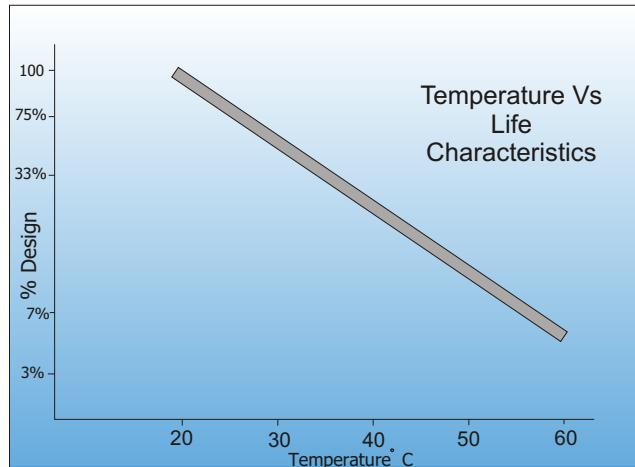

Temperature	Shelf Life
0 °C - 20 °C (32 °F - 68 °F)	12 Months
21 °C - 30 °C (69 °F - 86 °F)	9 Months
31 °C - 40 °C (87 °F - 104 °F)	5 Months
41 °C - 50 °C (105 °F - 112°F)	2.5 Months

CHARGING CHARACTERISTICS


Floating - The optimum float voltage for a battery is temperature dependant, at 15 - 24°C the recommended value is 2.27 - 2.30V. It is recommended that battery installation sites are temperature controlled, however float voltage can be increased or decreased to compensate for temperature variations. Adjustment is calculated at +/- 3 mV per degree C.

The most suitable charging method for battery life and performance is the constant voltage method with a limited initial current, usually limited to a maximum of $C_{20}/4$.


Operating Temperature	Recommended Applied Float Voltage VPC
0-9	2.33 - 2.35
10-14	2.30 - 2.33
15-19	2.27 - 2.30
20-24	2.27 - 2.30
25-29	2.25 - 2.27
30-34	2.23 - 2.25
35-40	2.21 - 2.23




Battery Drawings

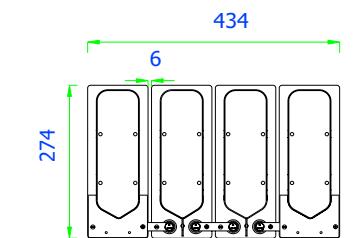


12 50 Front Access

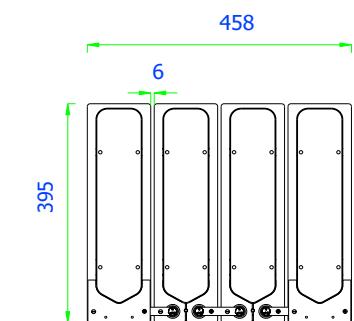


12 100 Front Access

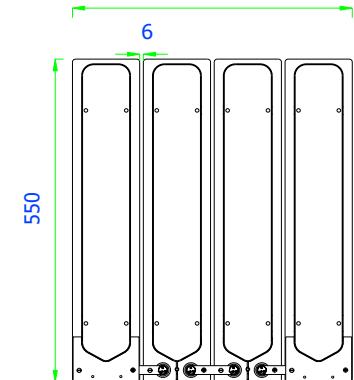



12 150 Front Access

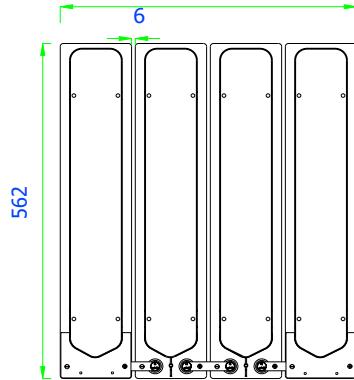


12 70 Front Access

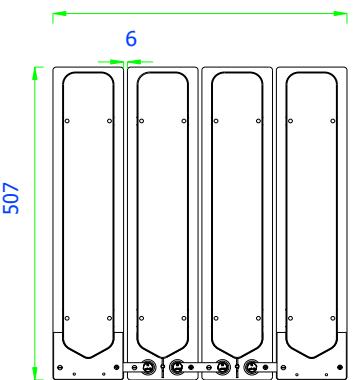


12 90 Front Access

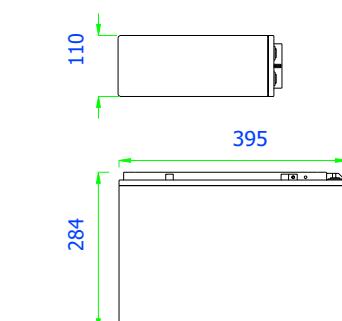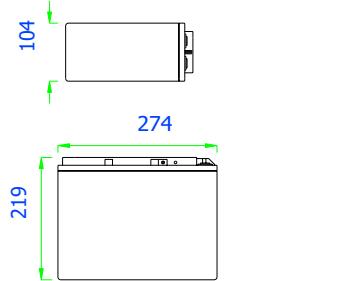


12 100 Front Access

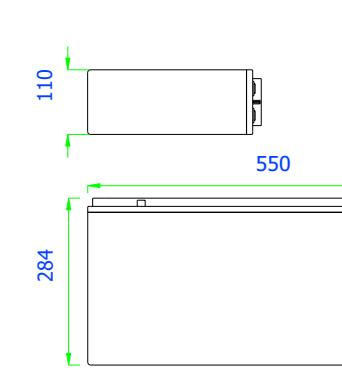


12 150 Front Access

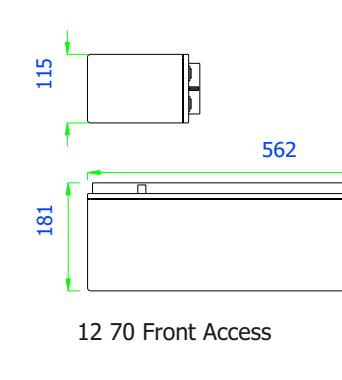


12 70 Front Access

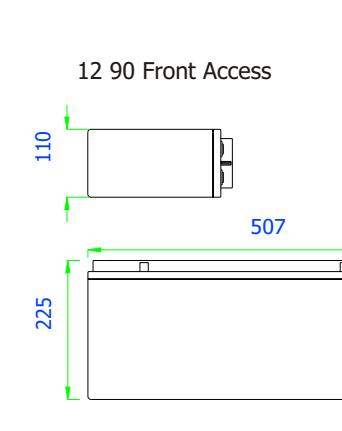


12 90 Front Access

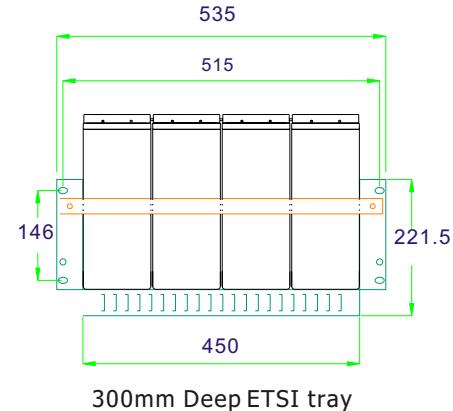



300mm Deep ETSI tray

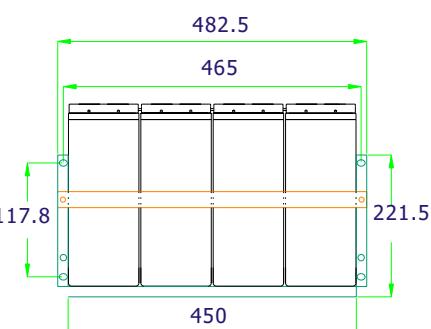

300mm deep 19 inch tray

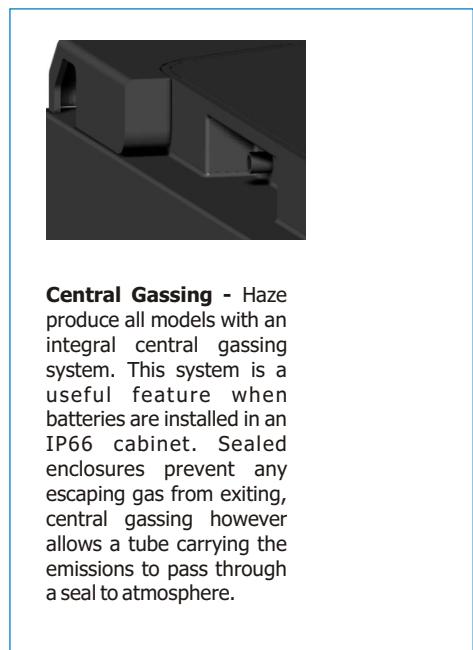

A 90 degree angle bracket can be provided for the end cell terminal connection

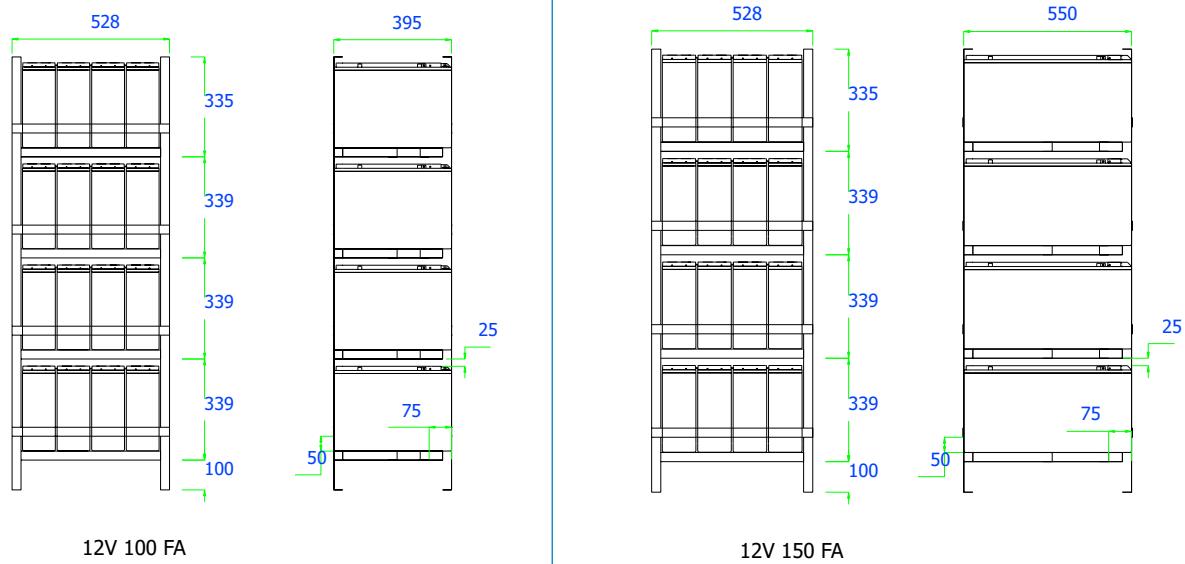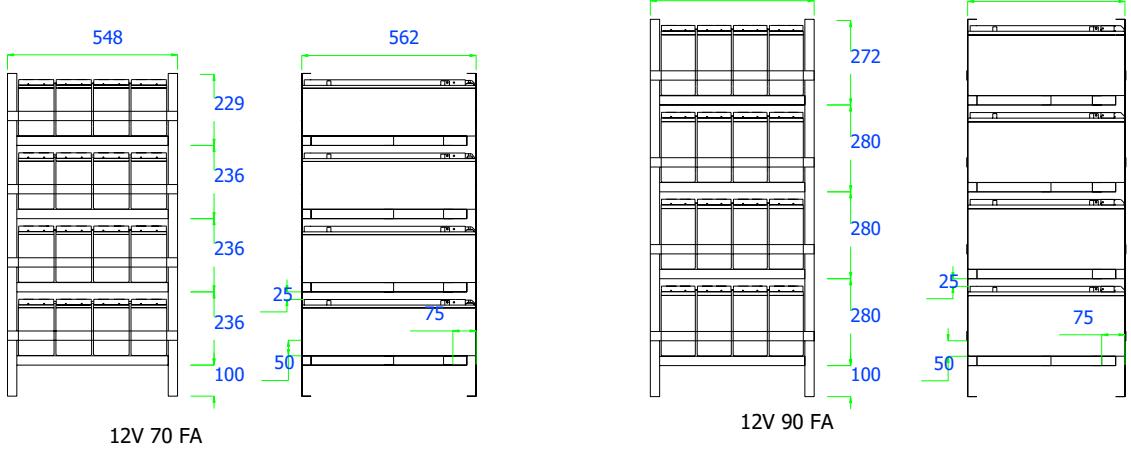


As can be seen from the rack diagrams, the Haze Front Access range are compatible with ETSI and standard 19" and 23" rack configurations, only the HZB/HZY 12 70FA can not be used in the standard ETSI and 19" formats. 300mm or 600mm deep trays can be utilised.

Other racking configurations can be tailored to meet the customers needs for a new installation or indeed to replace an existing arrangement utilising the same footprint.

The Front Access design allows racking clearances to be reduced whilst still allowing easy access for intercell connection and terminal inspection, all resulting in time and cost savings.

With reduced space requirements the designer has the option of smaller cabinets or more power from the same footprint.

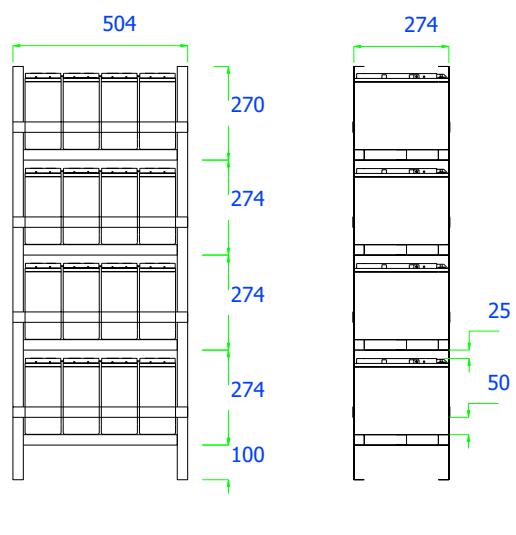



Website: www.hazebattery.com
E mail sales@hazebattery.com

161208

VRLA Product Range

4, 6 & 12 Volt AGM 1.3 to 230AH
6 & 12 Volt Gel 7.5 to 230AH
12 Volt Front Access AGM
12 Volt Front Access Gel
2 Volt AGM & Gel 50 to 3850AH
EV Gel
EV AGM
Marine Gel
Solar